



TurningPoint Quick Sheet: Changing the Channel on the Response Cards



To Change the Channel:



1. Press and release the "GO" or "CH" button.
2. While the light is flashing red and green, enter the 2 digit channel code (i.e. channel 1 = 01, channel 21 = 21).
Example: Blackwell 203 the frequency channel is 43.
3. After the second digit is entered, Press and release the "GO" or "CH" button. When it receives the new channel, the light will turn Green for a moment.
4. Press and release the "1/A" button. The light should flash yellow to confirm